


GB Battery Replacement Set


Opening the Wrist Transmitter

Remove the wrist strap and open the cover with the spanner by briefly twisting it to the left.

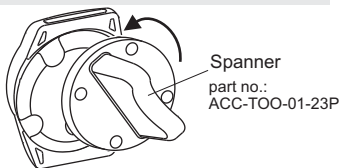

Replacing the Batteries

- Carefully remove the circuit board from the casing. Replace the battery and observe the correct installation position. The lettering must be visible. Only use 3 V batteries of type CR2032.
- Insert the sensor plates in acc. with the illustration into the tracks of the casing and replace the circuit board. The notches on the right side of the circuit board must lie on the ridge below the light transmitter.

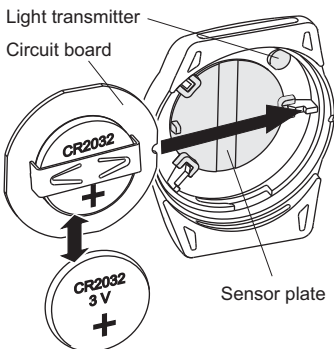

! Do not dispose of batteries in the household waste!

Keep batteries out of the range of children!

! Pay attention to the correct polarity.

Closing the Wrist Transmitter

- If necessary, place a new seal around the bottom cover rim.
- Replace the hooks of the cover in the slots in the casing and close the cover by twisting it to the right. Make sure that the cover is flush with the casing!
- Replace the wrist strap.

